
PET COLLAR SIZING

Measure the narrowest point of your dog's neck, as tight or as loose as you would like the collar to fit. The collar should be snug, without being so tight that it will cause discomfort, or loose enough to slide over your pet's head.

As a rule of thumb, a proper fit will leave just enough room for you to slide two fingers between the collar and your pet's neck.



| SIZE | FIT RANGE |
|------------------|------------------|
| SMALL (12") | 10" - 12" |
| MEDIUM (16") | 14" - 16" |
| LARGE (20") | 18" - 20" |
| XTRA LARGE (24") | 22" - 24" |
